

# BeSafe®

## User manual

GB



Group

0+



0-13  
Kilos



0-12  
Months

# iZi Sleep™

[www.besafe.eu](http://www.besafe.eu)

Complies with revised  
standard:

**ECE R44/04**

Tested and Approved



**EXTREME HAZARD:**  
Do not use on  
passenger seats fitted  
with activated airbag

ECE R44/04  
universal 0-13 kg

**E4**

04443548

## Thank you for choosing BeSafe iZi Sleep

It is important that you read this user manual BEFORE installing your iZi Sleep. Incorrect installation could endanger your child.

### Safety and convenience

As you and we know, safety comes first when children are involved. For that reason the iZi Sleep complies to and exceeds the highest safety requirements. In order to provide as much convenience as possible, the iZi Sleep seat introduces its innovative reclining-system: outside the car, your child can comfortably rest and sleep in the iZi Sleep, being put completely flat.

DO NOT use the seat in sleeping position when installed in your car.


### 'Safe-to-drive' indication



'safe-to-drive' indication on handle-rotation knob


## iZi Sleep child safety seat usage

(a) Car seat

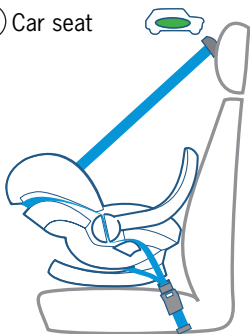

⚠ Be aware of the 'safe-to-drive' indication.

(b) Rocking chair, infant-carrier

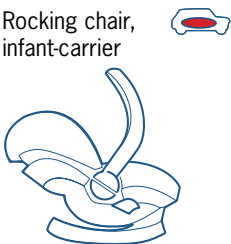


⚠ Always check the handle is upright and locked properly before carrying.

(c) Sleeping chair



⚠ DO NOT use the seat in sleeping position when installed in your car.


(d) Seat placed on top of a range of strollers (see [www.besafe.eu](http://www.besafe.eu))

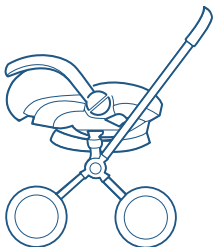

## Contents

Vital information	4
Preparing to install	6
Installation in the car	8
Removing the iZi Sleep from the car	10
Sleeping position	10
After an accident	11
Guarantee	11
Removing and refitting the cover	12
Using the iZi Sleep with a stroller	14
Warning: Potential misuse	16
Important advice	18
Point of sale information	20

## Vital information


- EXTREME HAZARD - DO NOT use on a passenger seat fitted with activated airbag. 
- iZi Sleep, only rear facing installation allowed.
- DO NOT use the iZi Sleep in sleeping position when installed in your car.
- ONLY use the iZi Sleep on forward facing car seats.
- ONLY install the iZi Sleep with a 3-point-belt approved to UN/ECE regulation No. 16 or other equivalent standards.

## Second-hand car seats

BeSafe advises that child seats should not be bought or sold second-hand. Many seats sold through local advertising and car-boot sales have been found to be dangerous.

### Important: Correct seat belts

iZi Sleep is only approved with 3-point-belt installation.

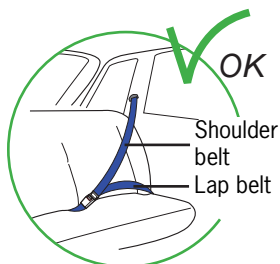


This is a 3-point-belt




This is a 2-point-belt

### Rear facing installation:

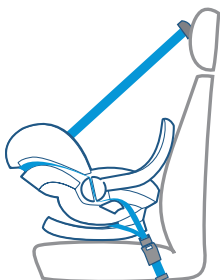

Only rear facing installation allowed.




### Positioning in car:

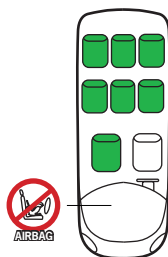

Allowed positions in car, only with 3-point-belt.

## Preparing to install

### Crucial parts

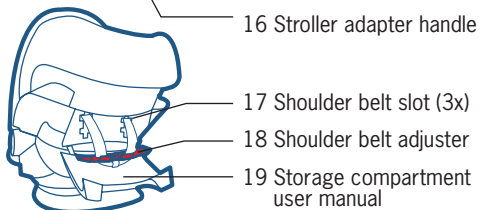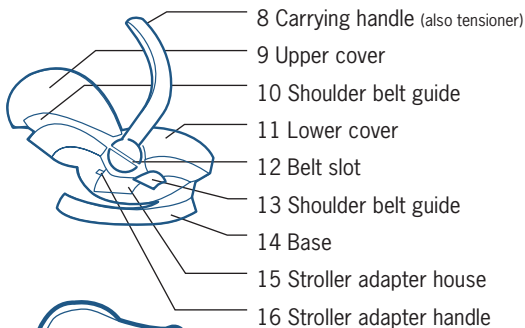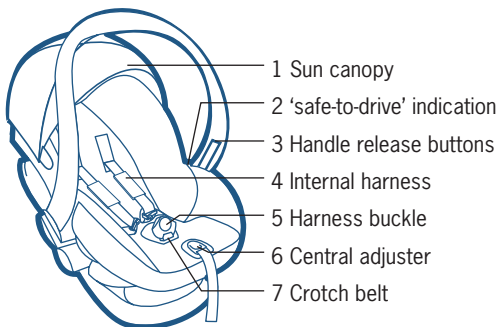

## Fitting your child in the iZi Sleep

### a) Position of the shoulder belt:

Check that the shoulder belt slots (17) are level with your child's shoulders.



Too high




Too low




Correct

### b) Adjusting the shoulder belts:

Open the storage compartment (19) on the back of the iZi Sleep. Detach the shoulder belt adjuster (18), and place it in the correct position by supporting the belt from the inside. (see illustration above). Make sure adjuster is clicked in.

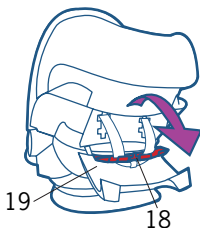

- c) Lay the shoulder belts (4) over the sides of the iZi Sleep, before your child is seated. Put the child in the seat. Place the belts over the shoulder and close the harness buckle (5). Pull the central adjuster (6). Just two fingers should fit between child and shoulder belt. Make sure the belts are not twisted.

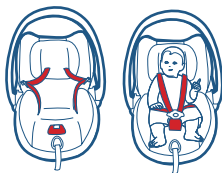

When the child weighs over 13kg or the child's head grows above the seat, the child should change to the iZi Comfort, group 1 seat.

**⚠** You must adjust the shoulder belt of the harness to the correct position for your child before installing the seat. The harness must be fastened and adjusted correctly at all times. Children should be encouraged to remain within the harness system.

## Installation in the car

⚠ The iZi Sleep can only be used with a 3-point-belt.


⚠ Rear facing installation only.

⚠ CHECK the 'safe-to-drive-indication'


⚠ EXTREME HAZARD - DO NOT use on a passenger seat fitted with activated airbag.



- 1 Make sure the iZi Sleep is placed in rear facing position.
- 2 Make sure the carrying handle (8) is in the carrying position.
- 3 Pull the 3-point-belt around the back of the iZi Sleep, and fasten the seat belt, 'click'.

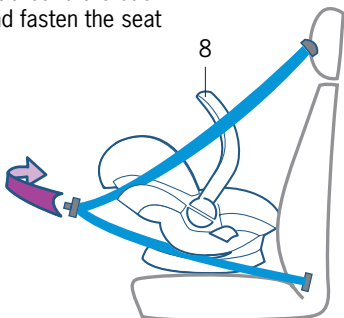


4

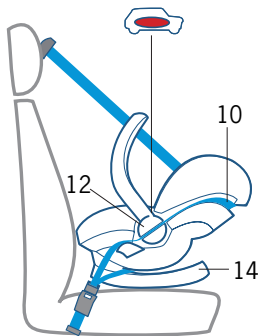


Make sure the lap belt of the 3-point-belt is placed between base (14) and lower seat shell. Pull the 3-point-belt through the shoulder belt guide (10) and belt slot (12), only at the buckle side. Follow the blue indications on the seat. Tighten the 3-point-belt firmly around the iZi Sleep.

5

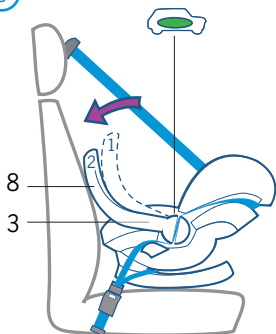

Press the handle release buttons (3) on the inside of the handle and move the carrying handle (tensioner) (8) to the furthest possible of the 2 'safe-to-drive' positions. For better contact, place the backrest of the car seat more upright, if possible.

Check the 'safe-to-drive' indication (2) on the carrying handle, near the handle release button (3).



'safe-to-drive' indication on carrying handle


## Removing the iZi Sleep from the car

Push the handle release buttons (3) and move the handle into carrying position. Then, release the 3-point-belt from the buckle and remove the belt from the belt guide.

## Sleeping position

**⚠ DO NOT** use the seat in sleeping position when installed in your car.

Your child can comfortably rest and sleep in the iZi Sleep, when put in the sleeping position (only outside the car) . To put the iZi Sleep into the sleeping position, push both handle release buttons (3) on the inside of the carrying handle (8) and move the handle to the head of the iZi Sleep.

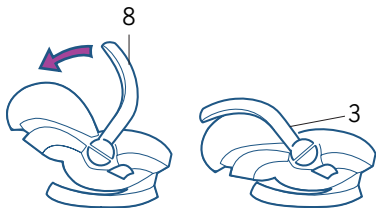

## After an accident

After an accident, the iZi Sleep and your car seat belts should be replaced. Although they may look undamaged, if you were to have another accident, the iZi Sleep and your car seat belts may not be able to protect your child as well as they should.

## Guarantee

All BeSafe products are carefully designed, manufactured and tested. All BeSafe child safety seats are tested periodically out of our continuous production in our test laboratory. Furthermore they are tested by independent test institutes.


Should this product prove faulty within 24 months of purchase due to materials or manufacturing fault, except covers and child safety belt, please return it to the original place of purchase.


The guarantee is only valid when you use your seat appropriately and with care. Please contact your dealer, he will decide if the seat will be returned to the manufacturer for repair. Replacement or return cannot be claimed. The guarantee does not get extended through repair.

The guarantee expires:

- When there is no receipt.
- When defects are caused by wrong and improper use .
- When defects are caused by abuse, misuse or negligence.


## Removing and refitting the cover

 The cover is a safety feature. Never use the iZi Sleep without it.

 DO use the child safety belt provided with the iZi Sleep at all times.

### Removing the cover



Pay attention when removing the cover, refitting is done in reverse order.

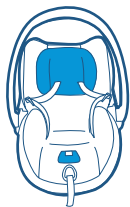

① Remove the head hugger and crotch pad (blue).

② Removing the upper cover (9):


- Detach the cover from the small hooks on both sides of the back part (a).
- Release the rubber bands that attach the cover to the inside of the back (b).
- Open the zippers on both sides and detach the Velcro tape (c).
- Pull the cover from the seat plate (d).

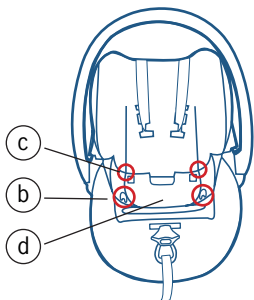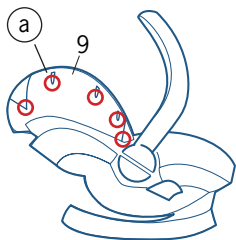

3

Removing the lower cover (11):


- Detach the elastic knots of the lower cover (e).
- Pull the cover over the central adjuster (6).
- Detach the elastics which attach the cover to the inside of the seat-part of the iZi Sleep.

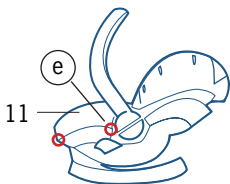

### Refitting the cover

Refit the cover, using the instructions above in reversed order. Start by pulling the cover over the seat plate.

### Washing instructions

 The cover of the iZi Sleep should be washed in accordance with instructions (on the inside of the cover).

The cover should be washed on a 30 degrees woolwash program with delicate washing powder . Do not tumble dry the cover, drip-dry only.



Alcantara:

### Cleaning harness system and iZi Sleep


Do not use any aggressive cleaning products; these may harm the construction material of the iZi Sleep. Clean by hand with water and mild soap.

## Using the iZi Sleep with a stroller


The iZi Sleep can be installed on a range of strollers. For a complete list check [www.besafe.eu](http://www.besafe.eu).

### Installation on a stroller

- 1 Align the stroller adapter house (15) above the adapter on the stroller and move straight down, 'click'.

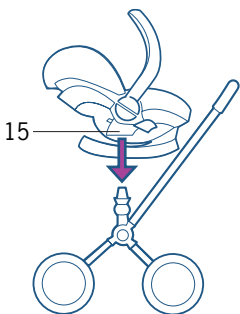


- 2 Move the carrying handle (8) into sleeping position.

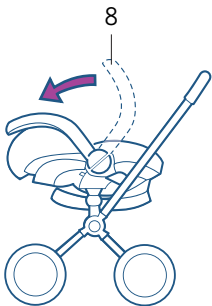


## Removing from a stroller

- 1 Move the carrying handle (8) into carrying position.

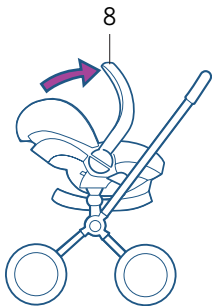

- 2 Push the stroller adapter handle (16) upwards and lift the iZi Sleep vertically from the stroller.

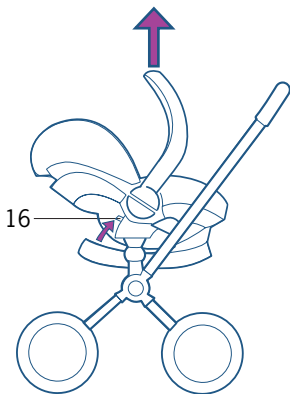

## Warning: Potential misuse

⚠ Forward facing is forbidden.



⚠ Reclined position in car is forbidden.  
“safe-to-drive” indication = red



⚠ Carrying handle (8) in carrying position is forbidden.  
“safe-to-drive” indication = red




⚠ Active airbag is forbidden.




### Correct installation

Shoulder belt only at buckle side in belt slot (12).

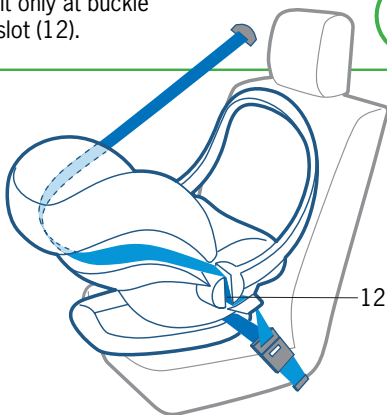

## Important advice


- DO use the child safety belt provided with the iZi Sleep at all times.
- Be aware of the 'safe-to-drive' indication.
- Make sure both 3-point-belt and child safety belt are tightened firmly, in order to prevent any unwanted dislocation of child or iZi Sleep. Check frequently.
- DO NOT use anything, such as a cushion or coat, to raise the iZi Sleep off the passenger seat. In an accident the iZiSleep and the car seat-belts will not be able to protect your child as well as they should.
- All passengers should be fastened by a safety belt.
- Make sure all passengers are informed on how to release your child in case of emergency.
- Make sure luggage or other objects are properly secured. Unsecured luggage may cause severe injuries to children and adults in case of accidents
- Rigid items and plastic parts of the iZi Sleep must be so located and installed that they are not liable, during everyday use of the vehicle, to become trapped by a movable seat or in a door of the vehicle.
- An unoccupied iZi Sleep should still be fastened.

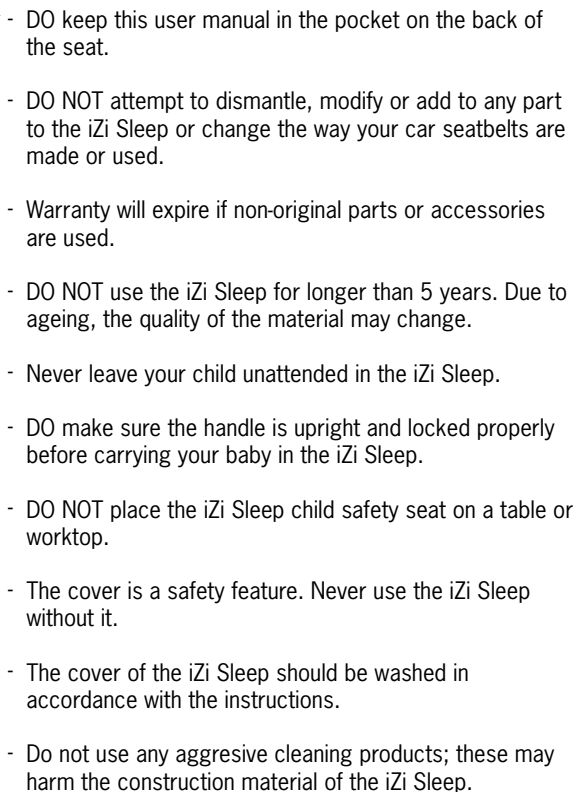- 
- DO keep this user manual in the pocket on the back of the seat.
  - DO NOT attempt to dismantle, modify or add to any part to the iZi Sleep or change the way your car seatbelts are made or used.
  - Warranty will expire if non-original parts or accessories are used.
  - DO NOT use the iZi Sleep for longer than 5 years. Due to ageing, the quality of the material may change.
  - Never leave your child unattended in the iZi Sleep.
  - DO make sure the handle is upright and locked properly before carrying your baby in the iZi Sleep.
  - DO NOT place the iZi Sleep child safety seat on a table or worktop.
  - The cover is a safety feature. Never use the iZi Sleep without it.
  - The cover of the iZi Sleep should be washed in accordance with the instructions.
  - Do not use any aggressive cleaning products; these may harm the construction material of the iZi Sleep.


## Point of sale information

### Notice:

1. This is a 'Universal' child restraint. It is approved to regulation No. 44.04 series of amendments, for general use in vehicles and it will fit most, but not all, car seats.
2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a 'Universal' child restraint for this age group.
3. This child restraint has been classified as 'Universal' under more stringent conditions than those which applied to earlier designs which do not carry this notice.
4. If in doubt, consult either the child restraint manufacturer or the retailer.
5. Only suitable if the approved vehicles are fitted with 3-point-belts, approved to UN/ECE Regulation No. 16 or other equivalent standards.

 **EXTREME HAZARD - DO NOT use on a passenger seat fitted with activated airbags.**



 **DO NOT use the seat in sleeping position when installed in your car.**

**BeSafe**<sup>®</sup>

2007 - v8.0

For more information:  
N-3535 Krøderen, Norway  
[www.besafe.eu](http://www.besafe.eu)